


Electric height adjustable desk

Assembly & Use Instructions

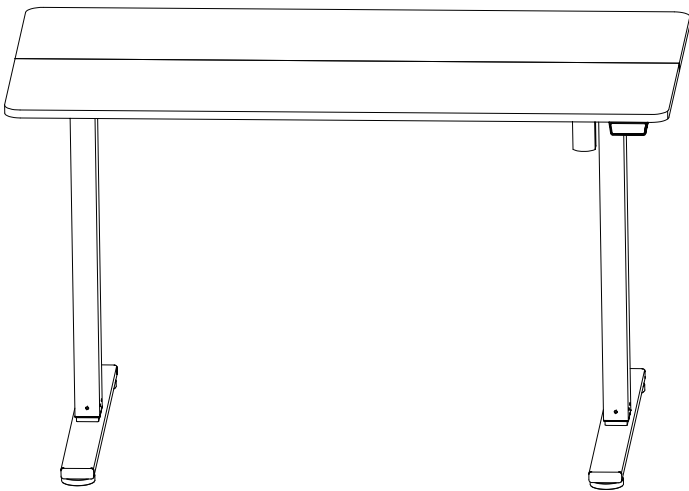

Thanks for your attention!

Technical Specifications

Height Range	695-1155MM (without desktop)
Base Width	1005MM
Travel Speed	20 per second (no load)
Weight Capacity	80 KG
Duty cycle	10%. Max. 2 mins on, 18 mins off
	Soft start/stop
	Adjustable leveling studs

Caution / Information



Make sure no obstacles are in the desk's path. Make sure the desktop is not touching any walls. Make sure all cords are appropriate length to accommodate the change in height.

WARNING
Pinch Point
Keep hands and fingers clear

Keep children away from electric height-adjustable desks, control units and handsets. There is a risk of injury and electric shock

Keep all electrical components away from liquids.

Do not sit or stand on the desk frame. Do not crawl or lie under the desk frame.

Do not place any objects taller than 20" underneath the desk.

Do not open any of the components ---the Legs, Control Box, or Switch. There is a danger of electric shock.

This product is designed with a duty cycle of 10%. (2 min. on, 18 min. off)

In the event of a power outage or if the power cord is unplugged, a manual reset may be necessary--see Step 10.

Use/Liability

This height adjustable desk has electric motors and is designed for use in dry work areas only.

The desk height is adjustable so that it can be positioned at the most ergonomically suitable height.



Any other use is at user's risk.

Under no circumstances does the manufacturer accept warranty claims or liability claims for damage caused from improper use or handling of the desk frame.

Important:
Please read this manual carefully, if this desk is sold, please provide this manual to the buyer.

Parts


Tools required

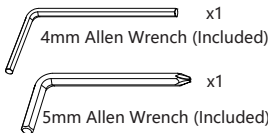


Phillips Head Screwdriver and/or Power Drill

Tape Measure


Components



1
Left Leg




2
Right Leg




3
Motor




4
Beam



5
Side Brackets



6
Drive Rod




7
Foot



8
Glide




9
Switch




10
Power Box


Hardware



A M4x48
Motor Screw



B M6x14
Table Frame Screw



C M6x35
Table Frame Screw



C M6x35
Foot Screw




D M5x10
Drive Rod Screw



E M5x14
Wood Screw




F Table
Connection Block



G Cable Clips

Hardware

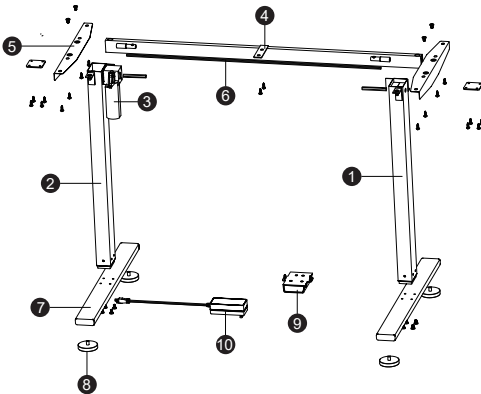


No.	Description	Qty
1.	Left Leg	1
2.	Right Leg	1
3.	Motor	1
4.	Beam	1
5.	Side Brackets	2
6.	Drive Rod	1
7.	Foot	2
8.	Glide	4
9.	Switch	1
10.	Power Box	1
A.	Motor Screw M4x48	4
B.	Table Frame Screw M6x14	4
C.	Table Frame Screw M6x14	2
C.	Foot Screw M6x14	8
D.	Drive Rod Screw M5x10	2
E.	Wood Screw M5x14	20
F.	Table Connection Block	2
G.	Cable Clips	4

Assembly Instructions


1.

Install the **Motor**③ to the **Right Leg**② with **four Motor Screws M4*48** **A**.

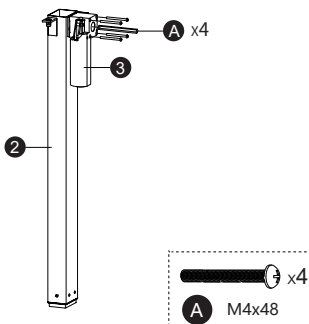


2.

Install the **Beam**④ onto the Legs with **two M6*14 Table Frame Screws** **B**.

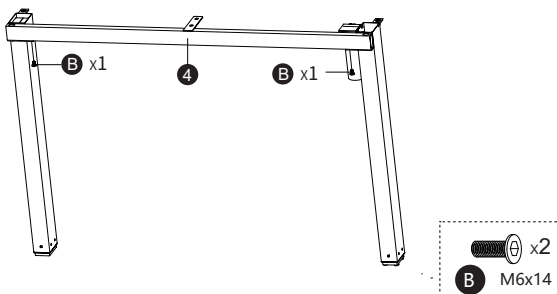

3.

Install the **Side Brackets**⑤ to the Legs with **two M6*14 Table Frame Screws** **B** and **two M6*35 Table Frame Screws** **C**.

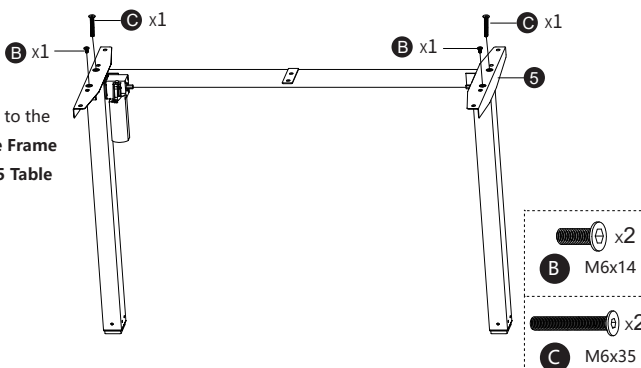


page 4

Assembly Instruction


4.

Install the **Drive Rod**⑥ to the Legs with **one M5*10 Drive Rod Screw** **D**.

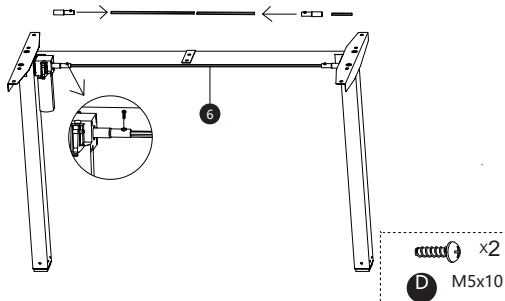

5.

Attach the **Foot**⑦ to the Legs with **four Foot Screws M6*35** **C**, and then attach the two **Glides**⑧ to the **Foot**⑦.

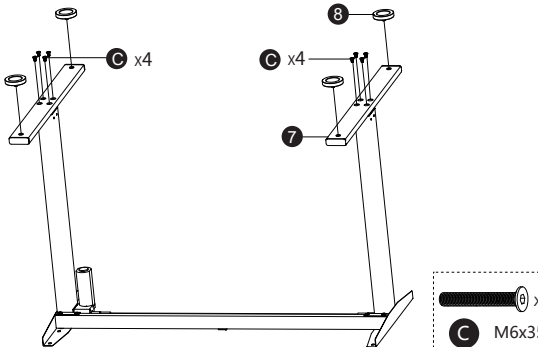


Such way for another one.

6.

Insert **eight Wood Screws M5*14** **E** to join the two Tabletop together with **two Table Connection Blocks** **F**.

And then Connect the Table Frame and the Table Board together with **ten M5*14 Wood Screws** **E**.

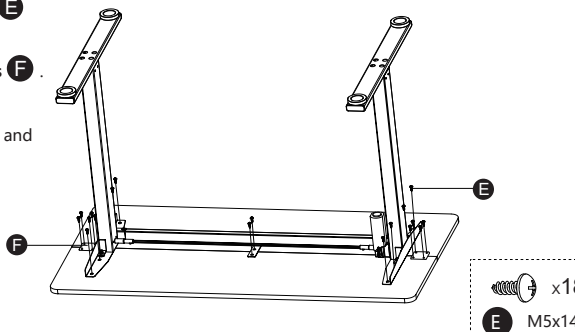


page 5

Assembly Instructions


7.

Attach the **Switch**⑨ to the Table Board with **two Wood Screws M5*14** **F**.

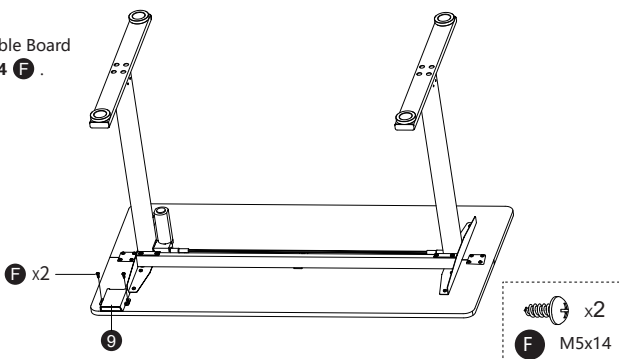


8.

Connecting the **Power Box**⑩.

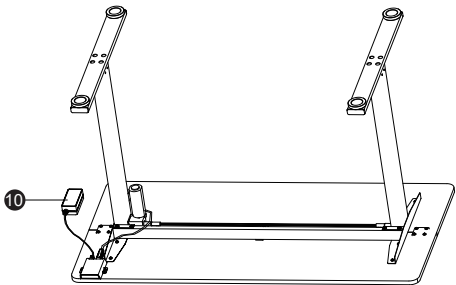

9.

It's finished!

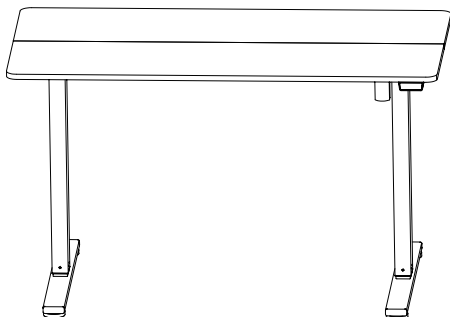

page 6

Assembly Instructions

10.

Plug the **Power Cord** into a 110V-240V outlet.



Make sure no obstacles are in the desk's path.
Make sure the desktop is not touching any walls.
Make sure all cords are appropriate length to accommodate the change in height.

Important: You must Reset the desk prior to use.
Reset Procedure: : Press and hold the K2 down key on the hand controller until the table reaches its lowest height and displays "ret". At this time, the table will give a "drip" sound, then slightly lower and then rise back to the lowest height, and then release the down key, that is, the reset is completed. Your desk can be used normally now.

一、Push-button



二、Manipulation

K1 Up Key K2 Down Key

1. When the machine is turned on, the lifting table can rise and fall by pressing "K1" or "K2". 2. Child lock unlock: Press and hold "K1+K2" for 5 seconds at the same time.
3. Child lock release: Press and hold "k1+k2" for 5 seconds at the same time.
4. "RET" is the reset code, and there will be noise after successful reset.

11. Troubleshooting

If your desk is not functioning properly it may need to be reset. Unplug the power cord for 20 seconds. Plug the power cord back in and follow the RESET procedure outlined in Step 10.

If your desk has a handset with an LED readout and it displays "rES" (reset), perform the reset procedure outlined in Step 10. confirm that all wired connections are secure (legs to cables, cables to control box). Then perform the reset procedure outlined in Step 10.

If the error message persists after the reset procedure, contact your seller.

If the height between the legs exceeds 1.5 inches, stop the reset procedure&contact your seller.

If the handset displays "HOT", let the base cool down for 18 minutes.

page 7